Model 8000

DIGITAL MULTIMETER

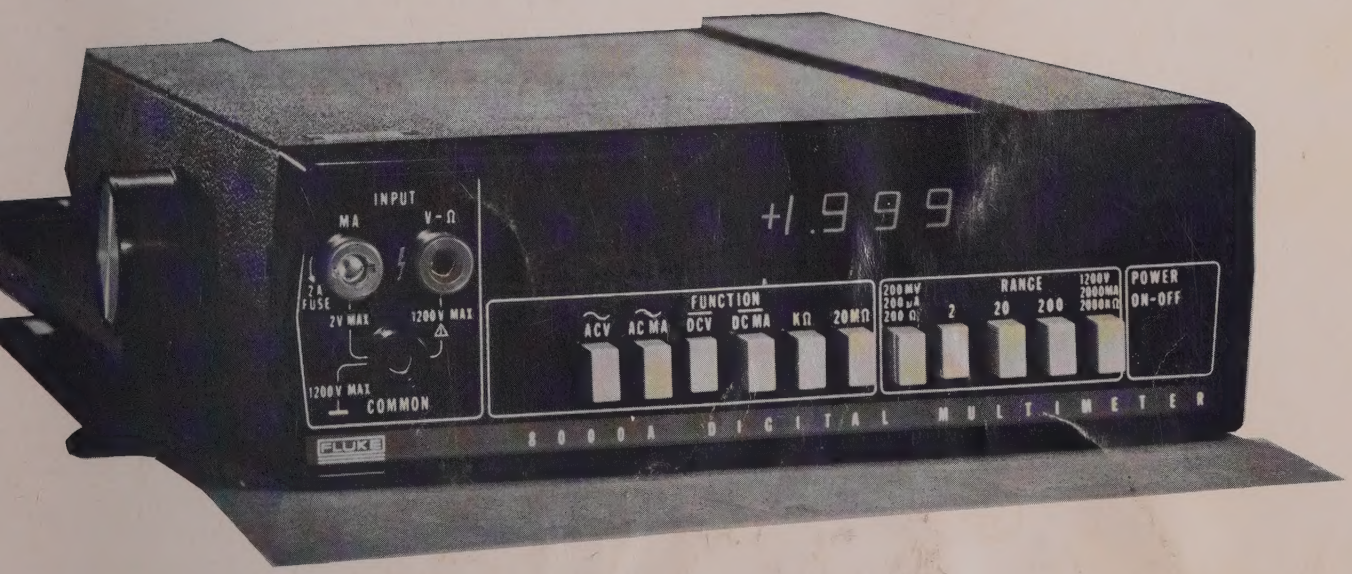

FLUKE®

STUDENT HANDOUT

INTRODUCTION

The model 8000A has twenty six ranges and six functions; A.C. volts, D.C. volts, A.C. milliamps, D.C. milliamps, Kilohms and one Megohm range. In D.C. and A.C. voltage ranges, the 8000A will read from 100 microvolts to 1200 volts. A.C. and D.C. milliampere ranges make possible readings from 100 microamps up to 1 Amp. The five K Ohm resistance ranges allow readings of from 100 milliohms to 2 Megohms and in the 20 Megohm range it is possible to read from 10 K Ohms up to 19.99 Megohms.

It is the purpose of this workbook to present the reader with enough information about the theory of operation and methods of repair to make it possible for him to efficiently maintain, calibrate, and repair the 8000A. This manual was intended to supplement the audio-visual training program on the 8000A multimeter.

BLOCK DIAGRAM

The following block diagram descriptions have been included in order to give a fundamental understanding of the various functional circuits within the instrument.

INPUT DIVIDER

As seen in Figure 1, the first block is the Input Divider. It is the function of this circuit to attenuate the input signal to one of the two basic ranges of the instrument. The two basic ranges of the instrument are 0 to ±0.2 volts and 0 to ±2 volts. The attenuated voltage out of the Input Divider is fed directly to the Active Filter circuit.

ACTIVE FILTER

The Active Filter is a two pole filter designed around a Monolithic Integrated Circuit. It is the purpose of the Active Filter to eliminate noise components that appear on the measurement line before the signal is presented to the Analog I.C.

ANALOG I.C.

A D.C. voltage within one of the basic ranges of the instrument is applied to the input of the Analog I.C. It is the function of the Analog I.C. to convert the D.C. signal appearing on its input to a specific frequency representative of that voltage. Contained within the Analog I.C. is a dual gain amplifier which accounts for the two basic ranges of the instrument. The output frequency of the Analog I.C., with a 0 volt input, will be 80 kHz and with a full magnitude negative voltage -0.2 or -2.0 volts, depending upon the range selected, the output frequency will be 120 kHz. With a positive full range signal being applied, the output frequency of the Analog I.C. will be 40 kHz. The input of the Analog I.C. is switched automatically within the I.C. to produce, first a 0 volt input frequency and then a measured voltage frequency. Therefore, the input voltage to the Analog I.C. is continuously switched, thus producing 80 kHz for 100 ms, a rest time of 20 ms and then the measure frequency output for 100 ms. The output frequencies of the Analog I.C. are applied to the Digital I.C.

DIGITAL I.C.

It is the purpose of the Digital I.C. to count the frequencies being applied from the Analog I.C., and to convert the difference count into Binary Coded Decimal format. Polarity Sensing information is derived from the input frequency as is Over-Range information. Polarity and Over-Range information is fed to the Polarity and Over-Ranging circuitry, while the BCD count is applied to the Decoder Driver, and Strobing Pulses S1, S2, S3 and S4, generated in the Gating circuit of the Digital I.C., are fed to the Strobing Circuit.

TIMING CIRCUIT

The Timing Circuit generates two 100 ms timing pulses separated by a 20 ms rest pulse. The first 100 ms timing pulse is called ZERO time, which causes the input to the Analog I.C. to be shorted, leaving its output to arrive at the rest frequency of 80 kHz. The 20 ms of rest time between ZERO time and Measurement time is used to allow the circuitry to stabilize. The second 100 ms pulse is Measurement time, during which the voltage to be measured is applied to the Analog I.C.

DECODER DRIVER

The Decoder Driver translates the BCD count, generated within the Digital I.C., into decimal format that will combine in such a manner as to light the appropriate sections of the Light Emitting Diodes, in order to display the proper number. The potential on these lines from the Decoder Driver becomes low when the numeral information is being commanded.

LIGHT EMITTING DIODES (LED'S)

In order to display a number, two conditions within the LED's must be present, simultaneously. These two conditions are a low level potential (0 volts) on the cathode of the LED's and a high potential (+5 volts) on the anode of

the LED's. The low potential is supplied by the Decoder Driver and the high potential commanding them ON is furnished by the Strobing Circuit.

POLARITY AND OVER-RANGING

Polarity and Over-Ranging information is supplied from the Digital I.C. on two of the four BCD output lines, prior to the presentation of the discreet count. It is the purpose of this circuit to enable the Over-Ranging LED, when commanded, to display both the Over-Range digit and Polarity information, as required in D.C. measurements.

STROBING

It is the purpose of the Strobing circuitry to apply a high logic level (+5 volts), in the designed sequence, to the LED's to allow them to illuminate. These strobing pulses are generated within the Digital I.C. and are applied to the Strobing Circuit. When input to the instrument exceeds its design capacity, the strobing circuit will cause the LED's to blink to warn the operator that he is overloading the instrument.

OHMS CONVERTER

When one of the resistance function switches is depressed, the Active Filter circuit serves two purposes, one, as an active filter and the other as an ohms converter amplifier. In the ohms functions the Active Filter is still used to reduce random noise on the signal line, the Ohms Converter operates in conjunction with the Input Divider and the unknown resistance, connected to the input terminals, to convert that resistance into a D.C. voltage that is within the basic range of the instrument. This voltage is fed through the Active Filter which outputs to the Analog I.C.

A.C. CONVERTER

In all A.C. voltage functions, the A.C. voltage out of the input divider or current shunts is applied to the A.C. Converter which will convert the A.C. voltage to D.C. voltage that is within one of the two basic ranges of the instrument.

CURRENT SHUNTS

The Current Shunts are used to convert both A.C. and D.C. current inputs into A.C. or D.C. voltages that are within the basic ranges of the instrument. In the case of A.C. current inputs, the A.C. voltage output of the Current Shunt is applied to the A.C. Converter for conversion to D.C. voltage.

POWER SUPPLIES

The model 8000A uses two different Power Supplies. One, a Line Operated Power Supply used when the battery option is not included with the instrument and a Battery Operated Power Supply which is used when both line and battery operation are desired. These supplies are not interchangeable. The appropriate supply must be included in the original instrument.

The Line Operated Power Supply furnishes three voltages for use within the instrument +15 volts and -12 volts are used as operating voltages and a +5 volts that is used for the logic and I.C. Display Circuits.

The Battery Operated Supply is designed to operate from the power line while recharging the self contained batteries. The output voltages furnished by this power supply are +15 volts and -15 volts (-12 volts furnished by the Line Operated Power Supply) for operating supplies and a +5 volts for the logic.

SUMMARY

Input to the instrument is applied through the Input Attenuator and/or other input signal conditioners and applied to the Active Filter where undesirable noise is removed. The noise free D.C. voltage from the Active Filter is applied to the Analog I.C. where it is converted into a specific frequency. The output of the Analog I.C. is two specific frequencies, one representing shorted input, the other representing the magnitude of the voltage being measured.

The output of the Analog I.C. is applied to the Digital I.C. which counts up during the ZERO Time period and then counts down during the Measurement Time period. The result is a BCD count which is decoded by the Decoder Driver into a decimal format which is compatible with the requirements of the LED's. The polarity of the input signal is sensed by the Digital I.C. and is then processed through the Polarity and Over-Range circuit for application to the Polarity and Over-Range LED.

The strobing commands, generated in the Digital I.C., then condition each Light Emitting Diode in the proper sequence of illumination. It should be pointed out that the illumination sequence is DS 1, the Over-Range and Polarity LED. Then DS 3 which is the second most significant figure, then DS 2 which is the most significant figure and then DS 4 which is the least significant figure of output. A signal applied to the 8000A which is beyond the instruments

measurement capability will cause the LED's to blink, indicating the overload condition, as a result of the strobing furnished by the Digital I.C.

SCHEMATIC DIAGRAM DESCRIPTION

Line Operated Power Supply (Figure 2)

A.C. line power being applied to the primary of T2 develops a voltage across the secondary winding which is rectified by the bridge rectifier network CR15, CR16, CR17 and CR18. The rectified voltage for the +15 volt supply is filtered by capacitor C18. The -12 volt supply is filtered by capacitor C18. A series pass transistor Q19 is used to regulate the -12 volt supply and is referenced to the zener Diode CR19. A separate secondary winding of T1 feeds a full way rectifier composed of CR13 and CR14 and is filtered by C19.

Battery Operated Power Supply (Figure 3)

Line power is furnished to transformer T1 whose secondary output is rectified by the full wave rectifier formed by CR13 and CR14 and is applied through R21 and RT1 which forms the recharging network that will supply 400 mA to the batteries. It should be noted that power switch S12 allows the batteries to recharge even though the instrument power switch is in the OFF position. With the power switch enabled 100 mA is supplied to the batteries and 300 mA is supplied to a 6 kHz inverter. It should be noted that the D.C. charging voltage is +5 volts and the batteries act as a filter for the +5 volt logic supply as seen on the schematic diagram. The +5 volts is then applied through power switch S12 to the 6 kHz inverter formed by Q22 and Q23. The 6 kHz output is connected to the primaries of transformer T2. The secondary of T2 is applied across a bridge rectifier formed by CR15, CR16, CR17, and CR18. The +15 volt operating supply is filtered by C17 while the -15 volt operating supply is filtered by C18.

ANALOG I.C. (FIGURE 4)

The input to the Analog I.C. is always a D.C. voltage within one of the two basic ranges of the instruments. The Analog I.C. contains an Electronic Switch, a Dual Gain Amplifier, and an Oscillator and is configured as shown in Figure 4. During ZERO Time, the input to the Amplifier is shorted so that 0 volts is supplied to the Amplifier. During Measurement Time the voltage to be measured to the instrument is connected to the Amplifier. This results in two different inputs being applied to the Amplifier under control of the timing circuit. The Amplifier feeds an Oscillator whose output frequency is determined by the magnitude of the voltage being applied to the Amplifier. With 0 volts applied to the Amplifier the Oscillator will oscillate at a frequency of 80 kHz. A positive polarity voltage will cause the oscillator frequency to change downward to a maximum deviation of 40 kHz. A negative voltage input to the Amplifier will cause the output frequency of the Oscillator to range from 80 kHz at 0 volts to 120 kHz at maximum input. The actual frequency of the Oscillator is determined by the analog value applied to the Analog I.C. A full scale positive voltage +2 volts or +.2 volts, depending upon the input range of the instrument, will cause the output frequency to increase to a maximum of 120 kHz.

DIGITAL I.C. (FIGURES 5 AND 6)

To understand the operation of the Digital I.C., refer to Figures 5 and 6. During the ZERO TIME, 100 ms, the Digital I.C. will count the nominal 80 kHz from the Analog I.C. During Measurement Time, with a full scale positive voltage, the output frequency of the Analog I.C. will be 40 kHz. The Digital I.C. will count and divide this frequency difference from 0 volts resulting in the BCD output representing 1999 counts. Should a maximum range negative voltage be applied to the instrument during Measurement Time the Digital I.C. will count 120 kHz from the Analog I.C. under those conditions; back down to its initial starting point and then back up once again producing a BCD count of 1999, but, since it had to count all the way to ZERO and then back up, the counters will have reversed and produce a negative output, thus sensing a negative polarity for use in the polarity and over-ranging circuit. Referring to Figure 5, the gating circuit will produce strobing pulses S1 through S4. These strobing pulses are used both externally and internally of the Digital I.C. Internally, the S1 pulse enables Polarity and Over-Range information to be fed out of the Digital I.C. on the Y and Z lines to the Polarity and Over-Ranging circuits. The S2 through S4 enable BCD count out of the Digital I.C. which is fed to the Decoder Driver. The Z line has a BCD weight of 1, the Y line a BCD weight of 2, the X line a BCD weight of 4, and the W line has a BCD weight of 8.

POLARITY AND OVER-RANGE (SCHEMATIC 8000A–1001)

Polarity and Over-Range information is strobed out of the Digital I.C. during the S1 period on the Y and Z lines. The Y line transmits polarity information while the Z line contains the Over-Range information. If the Y line is high (+5V), transistor Q8 will be enabled which will enable

transistor Q10. This will cause pin 7 of DS1 to be low thereby lighting the plus sign in DS1. If the Z line is high (+5V), Q7 will be enabled, enabling transistor Q9 thus causing a 1 to be displayed in DS1 during the S1 strobing period only.

DECODER DRIVER

BCD output information from the Digital I.C. is applied to the Decoder Driver. The Decoder Driver will furnish a low potential (0 volts) on the proper combination of the W,X,Y and Z lines to display the number digitized. The BCD count is strobed out by the S2, S3, and S4. Figure 7 is a truth table representing the BCD count from the Decoder Driver.

LIGHT EMITTING DIODES (LED'S)

LED's are used as a display element of this instrument. In order for a Light Emitting Diode to illuminate a low potential must be applied to the cathode (0 volts), simultaneous with a high potential (+5 volts) on the anode. The low potential in the case of the 8000 is commanded by the Decoder Driver in accordance with the BCD count as shown in Figure 7. The high potential applied to the anode is commanded by the strobing pulses S1, S2, S3, and S4 from the Strobing Circuit. The sequence of display is such that the DS1 lights first, the DS3 lights second, the DS2 lights third, and the DS4 lights last.

STROBING

Transistors Q11 through Q18 supply the strobing pulses. A high potential on the base of transistor Q15 will enable that transistor causing Q11 to be enabled. This will apply a high potential (+5 volts) to DS1. The remaining strobing circuits operate in the same manner to illuminate LED's DS2, DS3, and DS4.

INPUT DIVIDER (FIGURES 8 AND 9)

The Input Divider attenuates the input voltage to some value within one of the two basic ranges of the instrument. The Input Divider has four configurations depending upon the function selected, as shown in Figure 9.

DCV Configuration

In the DCV function the Input Divider attenuates the input voltage to within one of the two ranges (0 to ± .2 volts or 0 to ± 2 volts). Resistors R1, R2, R3 and the Range Switch are shown that make up the Input Divider in the DCV function. The output of the divider in this configuration is fed directly to the Active Filter.

A.C. Volt Configuration

The Input Divider in this function contains the same resistors plus capacitors C1, C2, C3, C4, and C21, which are added to linearize the A.C. measurements. The attenuated A.C. is applied through switch S1B to the gate Q1 which is the input to the A.C. Converter. The output of the A.C. Converter is applied through switch S1D to the Active Filter before being applied to the Analog I.C.

KOhms Configuration

In this function, the low end of the Input Divider is removed from ground and connected to the output leg of the Ohms Converter Amplifier through switch S5B. Q2 is connected to CL1 and Q3 in such a manner as to cause 1.0 mA of current to flow. This furnishes the potential across the Input Divider string for resistance measurements.

20 Meg Ohms Configuration

With the 20 Meg Ω function selected, the output of the ohms converter is fed through Switch S6C to the bottom of the input divider. Once again, Q2 requiring 1.0 mA flow causing a current to be supplied to the Input Divider for measuring in the 20 Meg Ω range.

ACTIVE FILTER

The Active Filter is a two pole filter. One pole being comprised of R18 and C11, the other pole is comprised of R19 and C12. Amplifier U2 senses the noise on the input line and feeds back a signal equal, but, out of phase with the input to cancel A.C. and transient components. Transistors Q20 and Q21 furnish over load protection on the input line to the Analog I.C.

OHMS CONVERTER (FIGURE 10)

When an ohms function is selected, K ohms or Meg ohms, the low end of the Input Divider is applied to the Active Filter circuitry, thus enabling the Active Filter in ohms functions. Figure 10 shows the configuration of the Active Filter circuitry when used in the ohms function. The Input Divider and the unknown resistor form a variable divider network on the output leg of Amplifier U2. The output of

the amplifier supplies 1 mA of current back to a current source (Q2) and a small amount of current through the divider network. The voltage at the junction of the Input Divider and the unknown resistance will be within one of the two basic ranges of the instrument. It is this voltage that is fed to the Analog I.C. for measurement and is representative of the resistance being measured.

CURRENT SHUNTS

Protection for the Current Shunts is furnished by Fuse F2 and Diodes CR9, CR10, CR11, and CR12. The Current Shunts are resistors R44 through R48. Notice that the R48 is a four terminal resistor in order to derive the accuracy required in the high current function. The current to be measured is applied to the Current Shunts and the resultant voltage drop across the current shunt is applied through Switch S11D to either the A.C. Converter for A.C. mA function or to the Active Filter and into the Analog I.C. in the D.C. mA function.

AC CONVERTER

All A.C. to be measured is applied through the A.C. Converter. This converter consists of a FET voltage follower, Q1 feeding an Operational Rectifier consisting of amplifier U1, CR4, and CR5. The input signal is buffered by Q1 and fed to the non-inverting terminal of Amplifier U1. The negative feedback through diodes CR4 and CR5 forces the same voltage to appear at the inverting terminal of U1 causing a current flow through R51 to ground. This current flows through the diodes on alternate half cycles causing half the average current to flow through R52. The voltage developed across R52 is filtered and fed to the active filter, then to the input of the Analog I.C. The conversion gain can be changed by changing the feedback resistance value.

CALIBRATION (FIGURE 11A THROUGH 11F)

By following the steps A through F shown in Figure 11, complete calibration of the 8000 can be accomplished

TROUBLESHOOTING

As with any other digital instrument the best approach to efficient and effective troubleshooting is a careful analysis of apparent mal-functions. First, by observing the display and then checking each function. Other keys to trouble-shooting are the wave-forms out of the Analog I.C. They should appear as shown in Figure 12.

Shorting pin 3 to pin 8 on the Decoder Driver will cause all 8's to be displayed in LED's DS2, DS3, and DS4. A trouble-shooting analysis chart can be found on Figure 13.

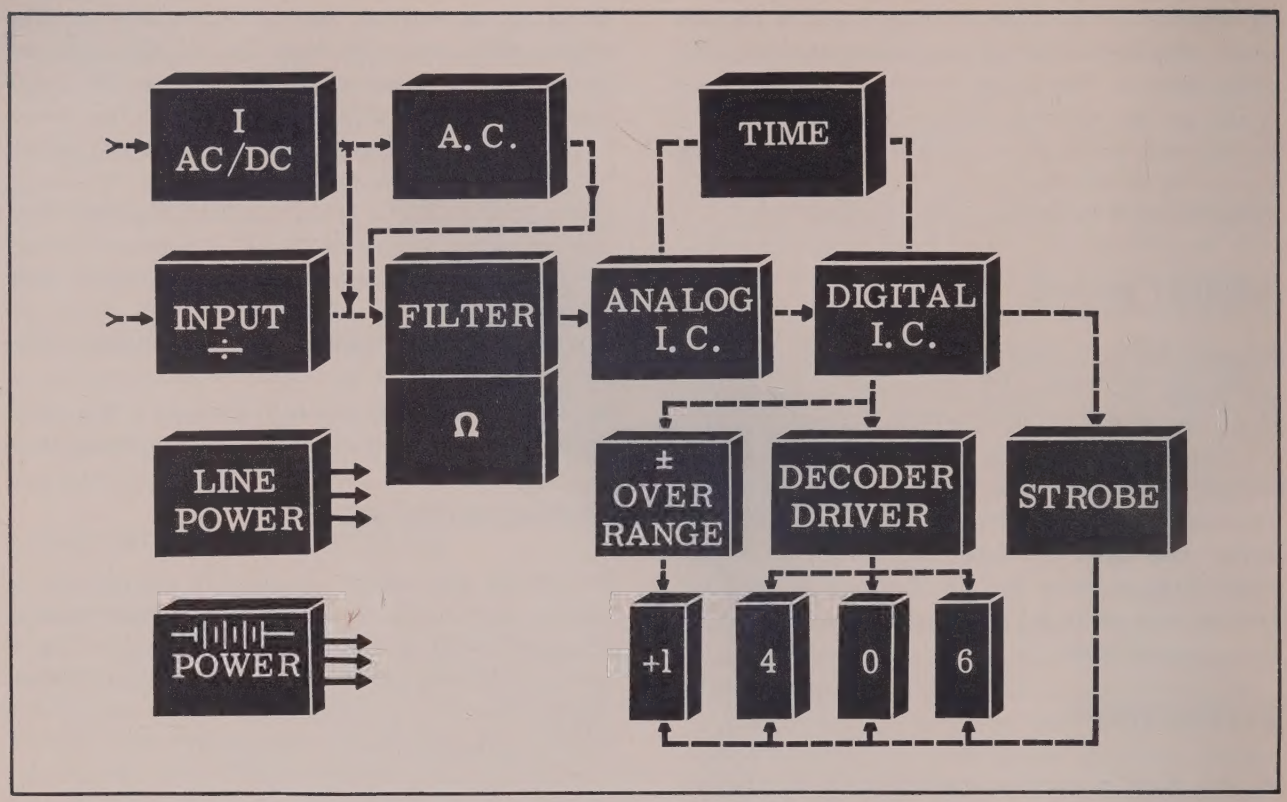

Figure 1. FULL BLOCK DIAGRAM

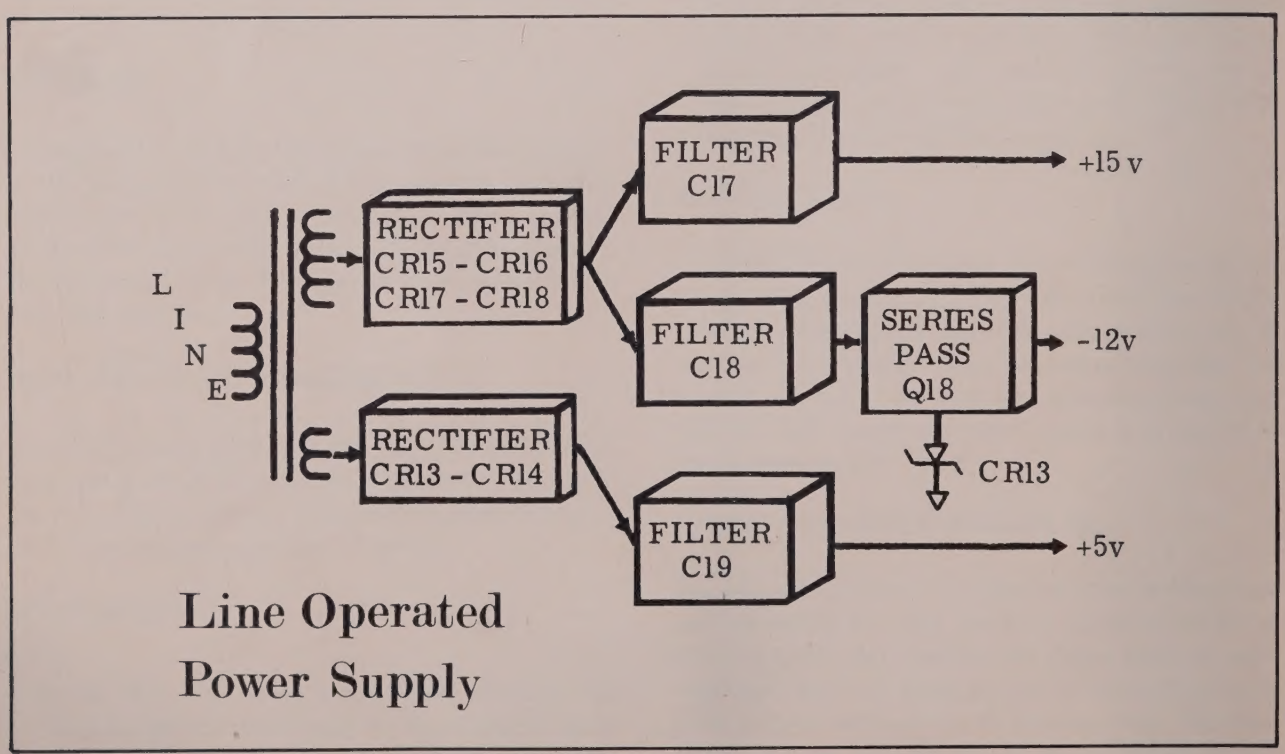

Figure 2. LINE OPERATED POWER SUPPLY

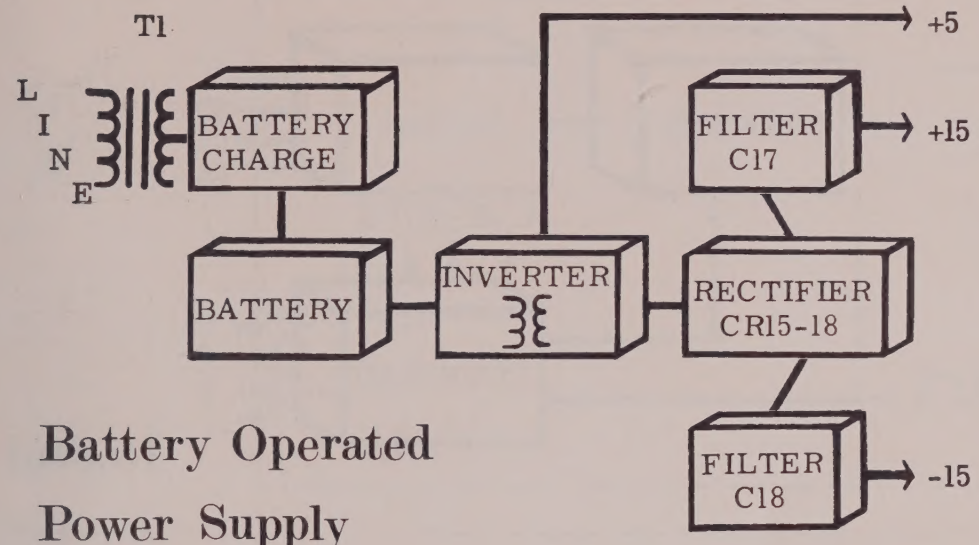

Figure 3. BATTERY OPERATED POWER SUPPLY

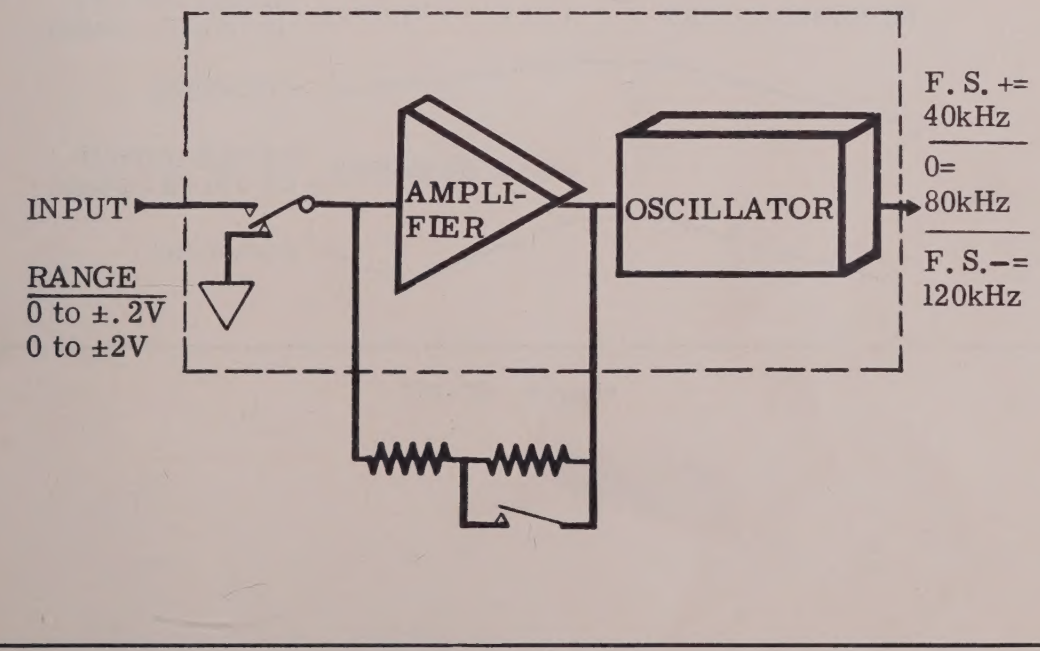

Figure 4. ANALOG I.C.

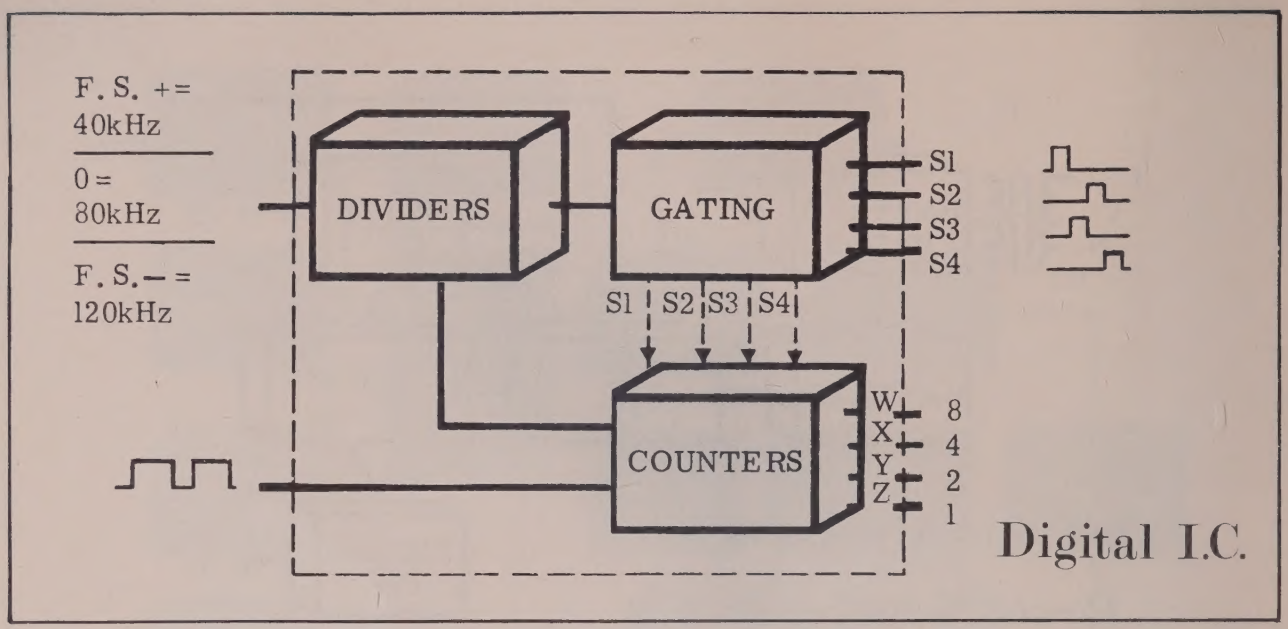

Figure 5. DIGITAL I.C.

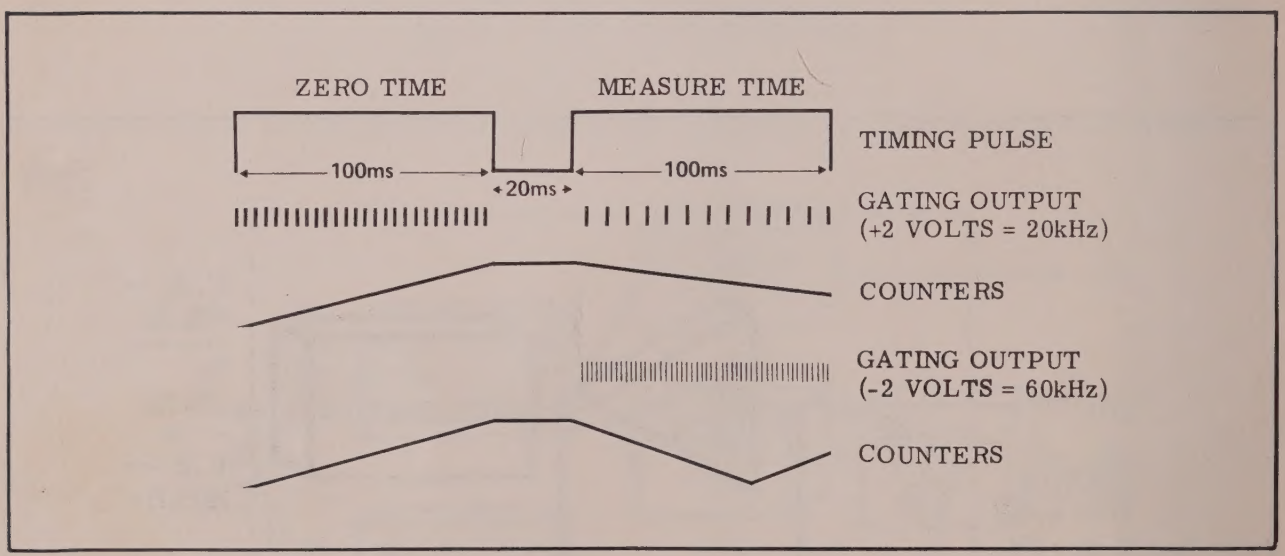

Figure 6. COUNT

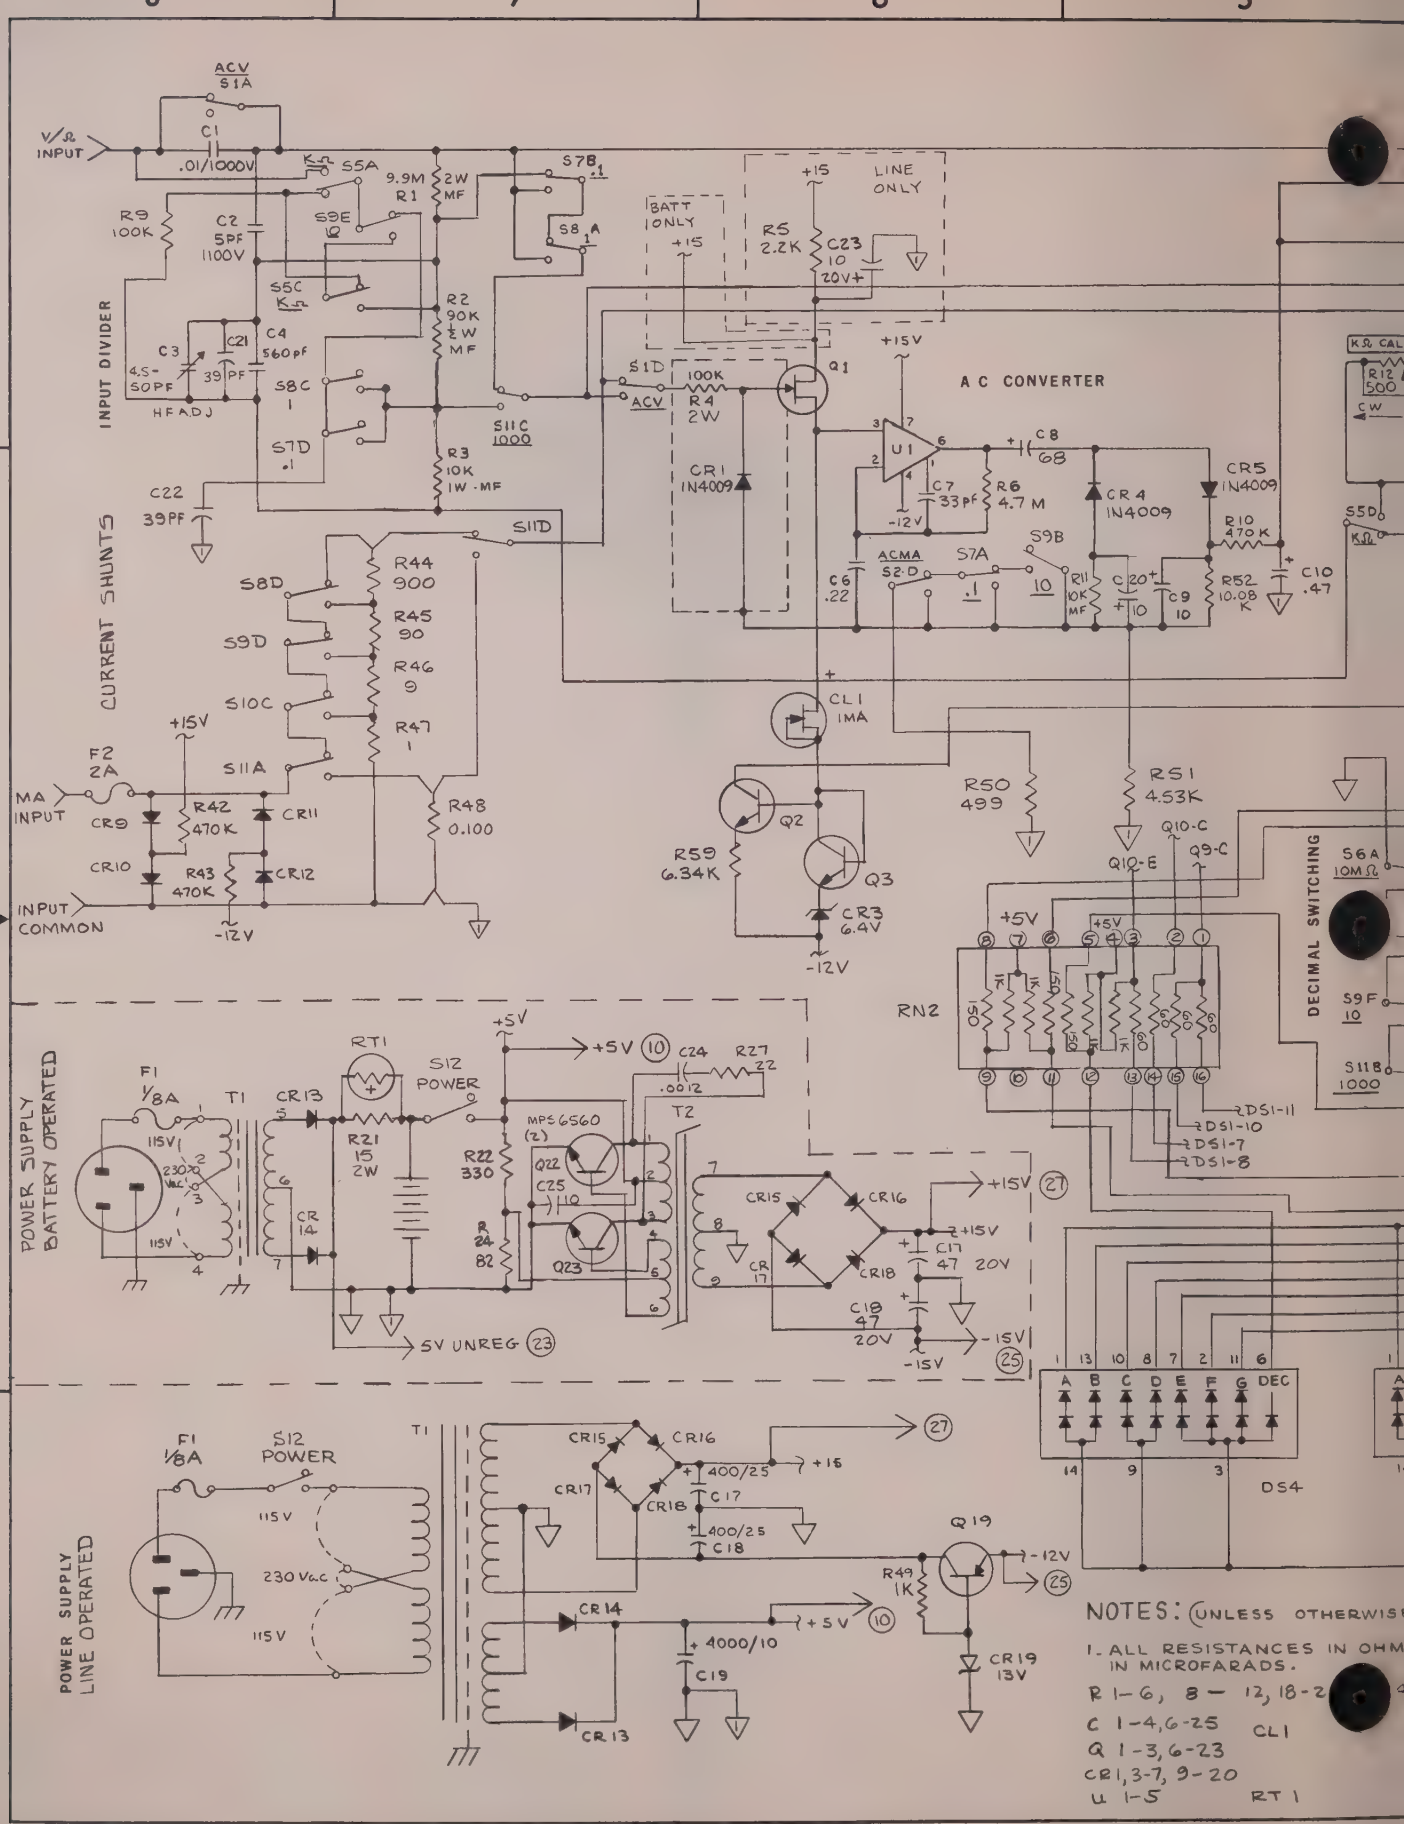
8
7
6
5
D
C
B
A
ACV
S1A
V/Ω INPUT
C1
.01/1000V
S5A
9.9M
R1
2W MF
S7B .1
S8 A
R9 100K
C2 5PF 1100V
S9E
S5C
R2 90K ½W MF
INPUT DIVIDER
C3 4.5-50PF HFADJ
C21 39PF
C4 560pf
S8C
S7D .1
R3 10K 1W-MF
S11C 1000
C22 39PF
S11D
CURRENT SHUNTS
S8D
S9D
S10C
S11A
R44 900
R45 90
R46 9
R47 1
R48 0.100
F2 2A
MA INPUT
INPUT COMMON
+15V
CR9
CR10
R42 470K
R43 470K
CR11
CR12
-12V
BATT ONLY +15
+15 LINE ONLY
R5 2.2K
C23 10 20V+
S1D
ACV
100K R4 2W
Q1
CR1 IN4009
A C CONVERTER
U1
C7 33pf
R6 4.7 M
C8 68
CR4 IN4009
CR5 IN4009
R10 470K
ACMA S2D
S7A .1
S9B 10
C6 .22
R11 10K MF
C20 10
C9 10
R52 10.08 K
C10 .47
K Ω CAL
R12 500
CW
S5D
K Ω
CL1 1MA
Q2
Q3
R59 6.34K
CR3 6.4V
R50 499
R51 4.53K
Q10-C
Q9-C
Q10-E
RN2
DECIMAL SWITCHING
S6A 10MΩ
S9F 10
S11B 1000
TO DS1-11
TO DS1-10
TO DS1-7
TO DS1-8
POWER SUPPLY BATTERY OPERATED
F1 1/8A
T1
115V
230V
CR13
CR14
RT1
S12 POWER
R21 15 2W
+5V
+5V (10)
C24 .0012
R27 22
MPS6560 (2)
Q22
Q23
C25 10
R22 330
R24 82
T2
CR15
CR16
CR17
CR18
+15V (27)
C17 47 20V
C18 47 20V
-15V (25)
5V UNREG (23)
POWER SUPPLY LINE OPERATED
F1 1/8A
S12 POWER
115V
230V
CR15
CR16
CR17
CR18
400/25 C17
400/25 C18
+15
Q19
-12V (25)
R49 1K
CR14
+5V (10)
4000/10 C19
CR19 13V
CR13
A B C D E F G DEC
DS4
NOTES: (UNLESS OTHERWIS
1. ALL RESISTANCES IN OHM
IN MICROFARADS.
R 1-6, 8 — 12, 18-2
C 1-4, 6-25
Q 1-3, 6-23
CR 1, 3-7, 9-20
U 1-5
CL1
RT 1

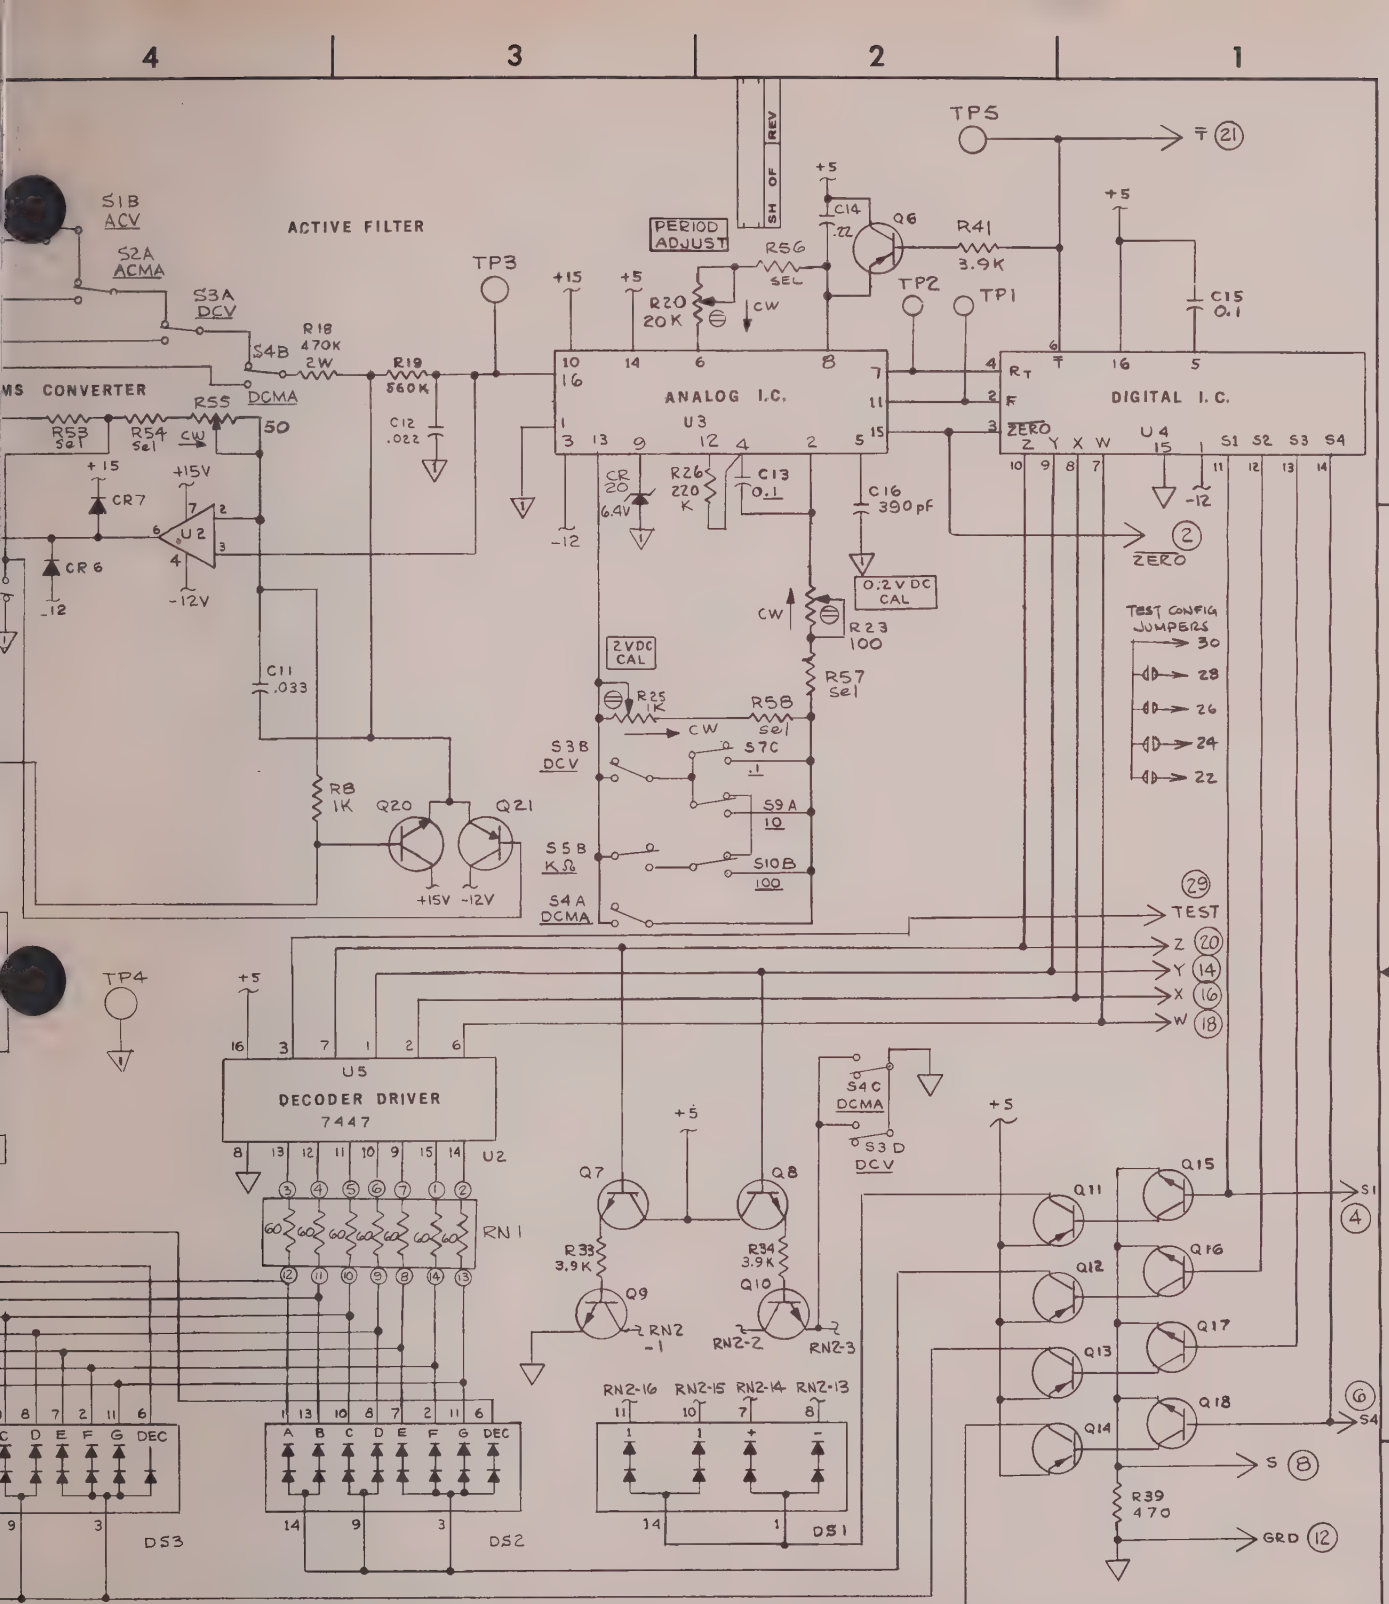

REV	CHANGE DESCRIPTION	DR	CHK	APPR
E	ADDED C21-C24, RN1&2, TP5	KT 3-10-72		
D	ADDED R60-66, C20, CR20, TP6	KT 8/9	DMM	
C	DELETED LASER TRIM, ETC	4/17		
B	COMPLETELY REDRAWN	CM 3-13-72		

ECIFIED)

LL CAPACITANCES

PROPRIETARY NOTICE
This document and the technical data hereon disclosed, are proprietary to John Fluke Mfg. Co., Inc. and shall not, without express written permission of John Fluke Mfg. Co., Inc. be used, released or disclosed in whole or in part, or used to solicit quotations from a competitive source or used for manufacture by anyone other than John Fluke Mfg. Co., Inc. The information hereon has been developed at private expense, and may only be used for purposes of engineering evaluation and for incorporation into technical specifications and other documents which specify procurement of products from John Fluke Mfg. Co., Inc.

FLUKE
89536

JOHN FLUKE MFG. CO., INC.
P.O. BOX 7428, SEATTLE, WA.

DO NOT SCALE DRAWING
DIMENSIONS IN INCHES

TOLERANCES

.XX ±.020	.000-.100 DIA	+.003-.002
.XXX ±.010	.010-.200 DIA	+.004-.002
ANGLES ±	.201-.500 DIA	+.006-.003
X_c =	.501-1.00 DIA	+.010-.005

DRC. MEREDITH 3-10-72
CHK
ENG
ENG
MATERIAL
FINISH

SCHEMATIC 3½ DIGIT MULTIMETER

PART NO	SIZE	DRAWING NO
—	D	8000A-1001

SCALE — SHT 1 OF 1 REV E

DIST

BCD COUNT					DECODER DRIVER OUTPUT LINES						
LINES				BCD COUNT	LINES						
W	X	Y	Z		9	10	11	12	13	14	15
0	0	0	1	1	–	–	X	X	–	–	–
0	0	1	0	2	X	X	–	X	X	X	–
0	0	1	1	3	–	X	X	X	X	X	–
0	1	0	0	4	–	–	X	X	–	X	X
0	1	0	1	5	–	X	X	–	X	X	X
0	1	1	0	6	X	X	X	–	–	X	X
0	1	1	1	7	–	–	X	X	X	–	–
1	0	0	0	8	X	X	X	X	X	X	X
1	0	0	1	9	–	–	X	X	X	X	X

NOTE: X = LOW LEVEL

Figure 7.

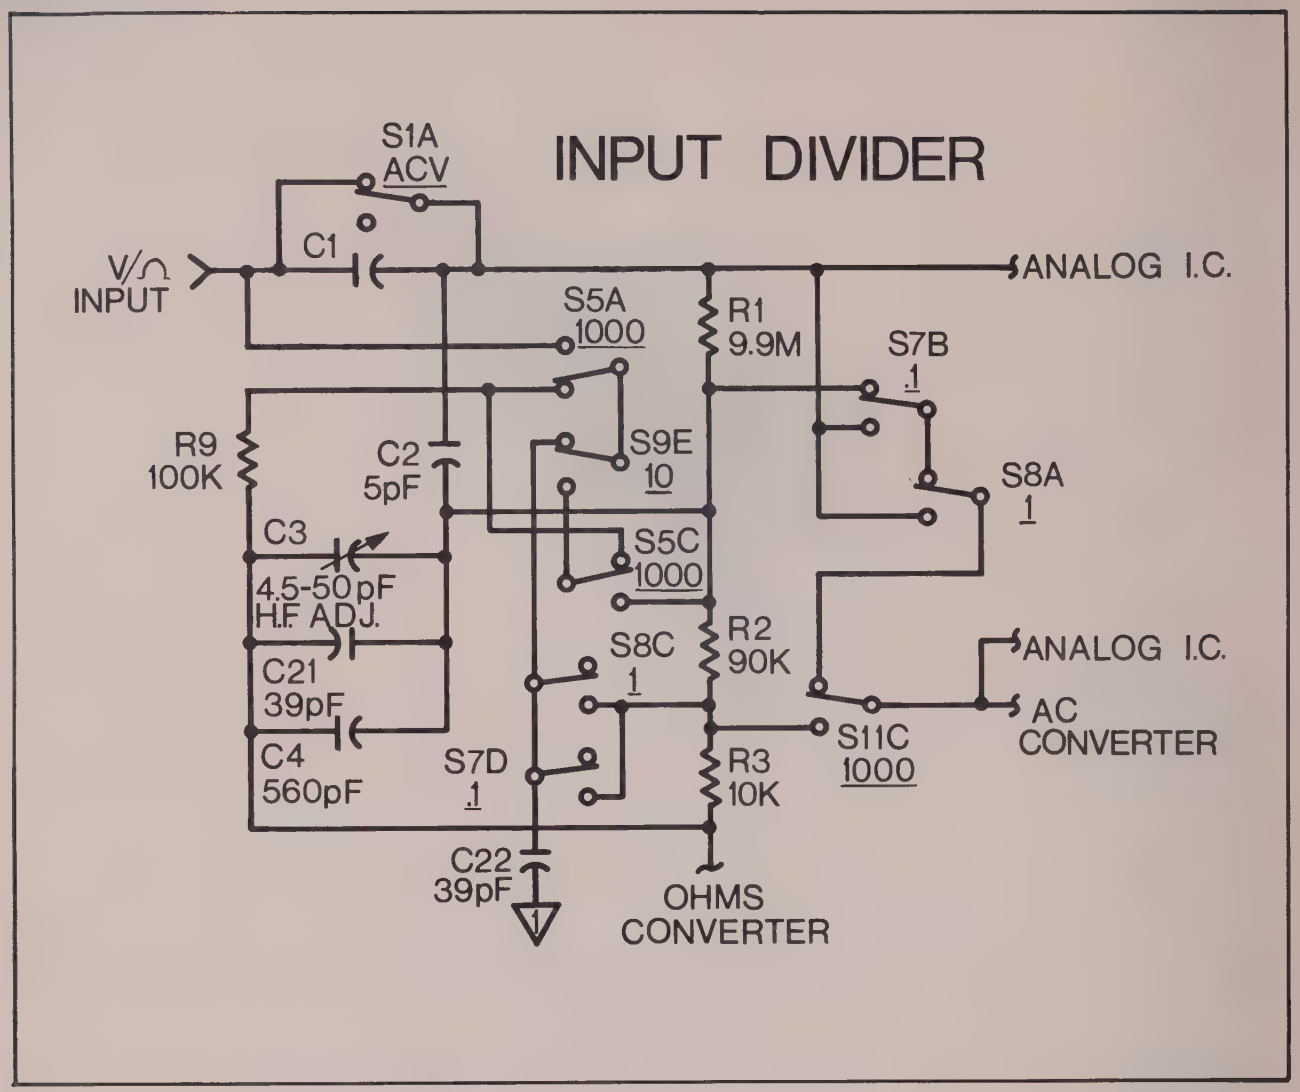

Figure 8. INPUT DIVIDER

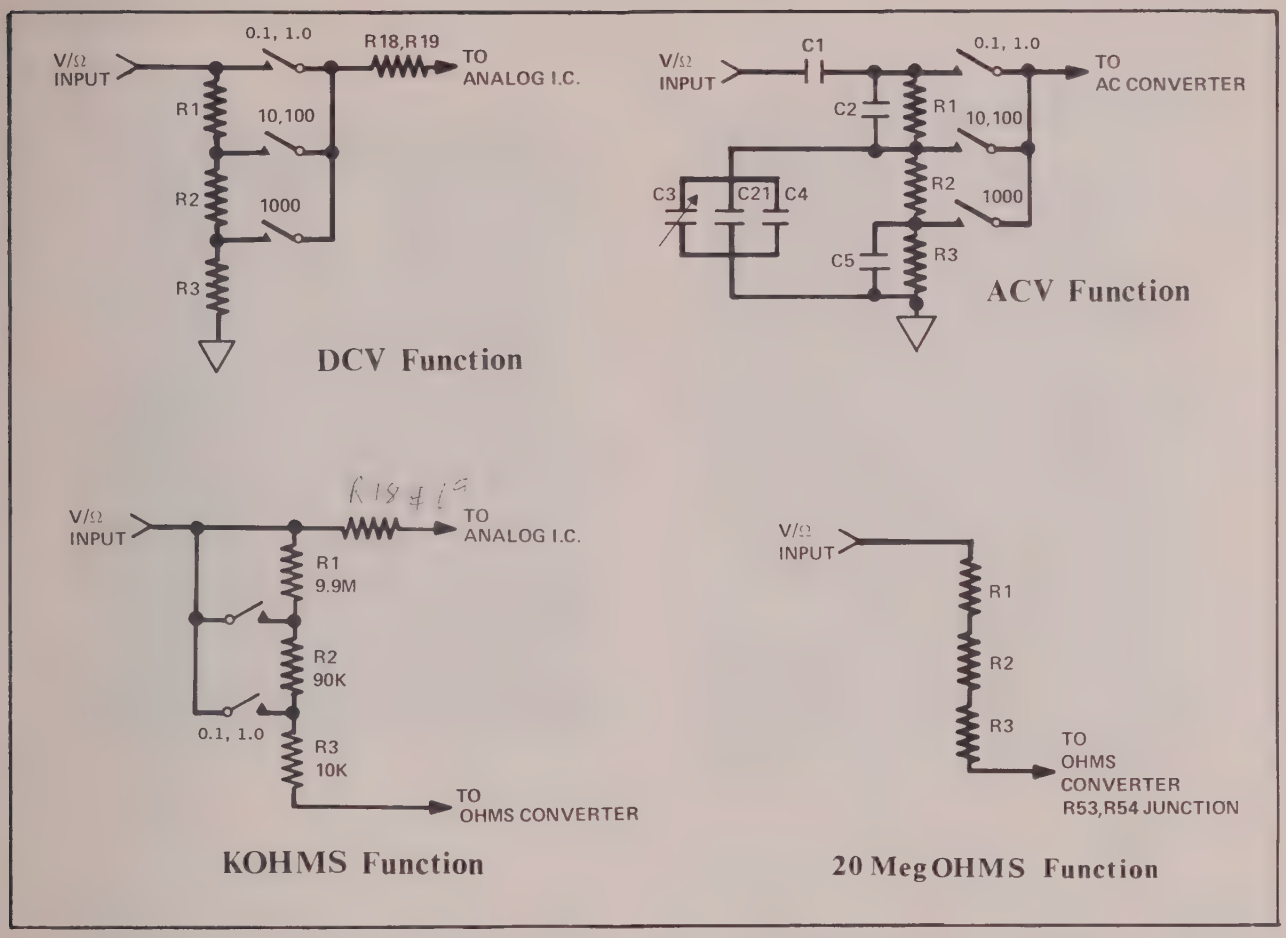

Figure 9. INPUT DIVIDER (4 CONFIGURATIONS)

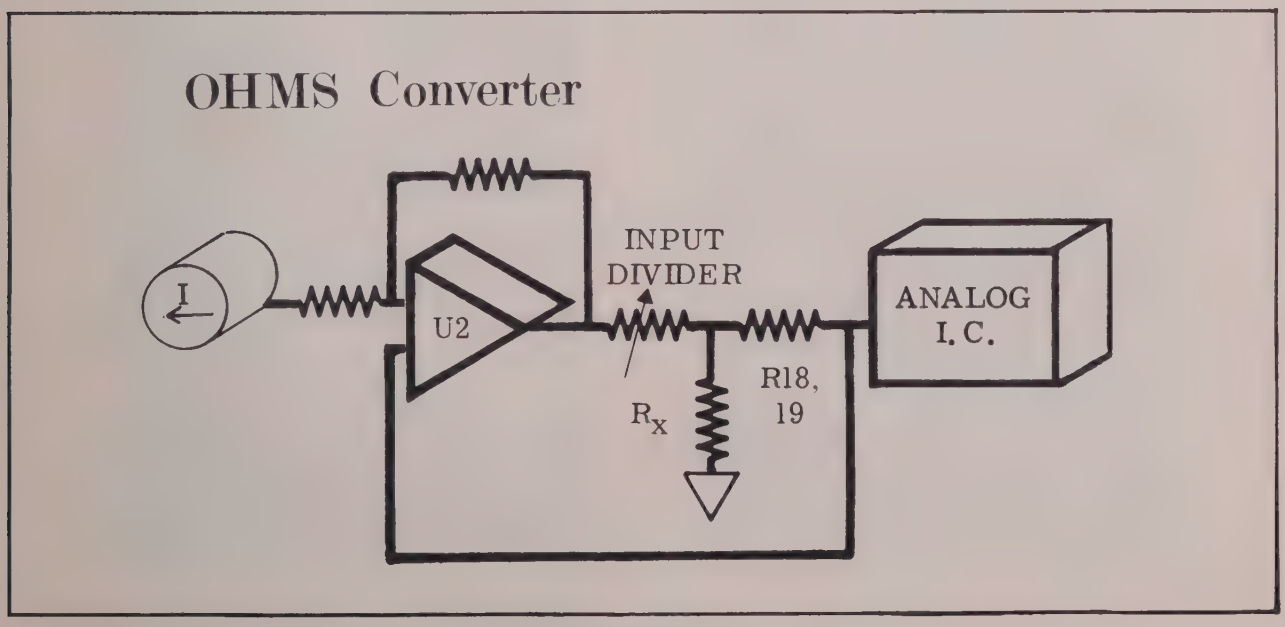

Figure 10. OHMS CONVERTER

Model 8000

A

FUNCTION
DCV, ACV

RANGE
2, 20, 200, 2000

INPUT
0 VOLTS

ADJUSTMENT
PERIOD (R20)

COUNTER CONNECTION
TP5

COUNTER READOUT
100,000 μsec

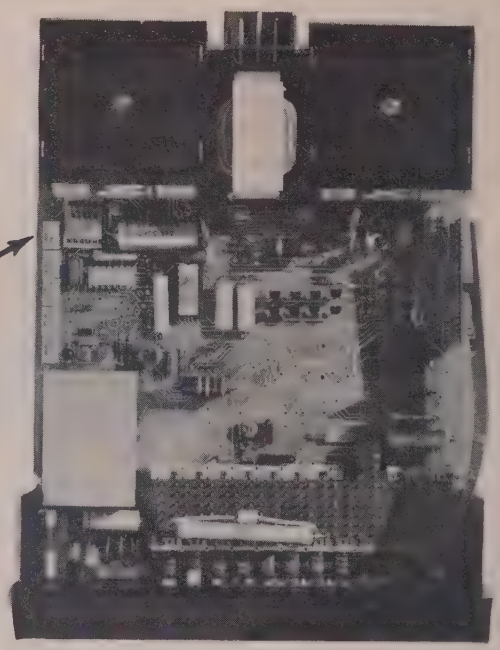

B

FUNCTION
DCV

RANGE
200mv

INPUT
+0.19Vdc

ADJUSTMENT
200 MVDC (R23)

DISPLAY
+190.0

Figure 11. CALIBRATION (Sheet 1 of 3)

Model 8000

FUNCTION
DCV

RANGE
2

INPUT
+1.9Vdc

ADJUSTMENT
2 VDC (R25)

DISPLAY
+1.900

D

FUNCTION
ACV

RANGE
20

INPUT
19Vac @20kHz

ADJUSTMENT
HF ADJ (C3)

DISPLAY
19.00

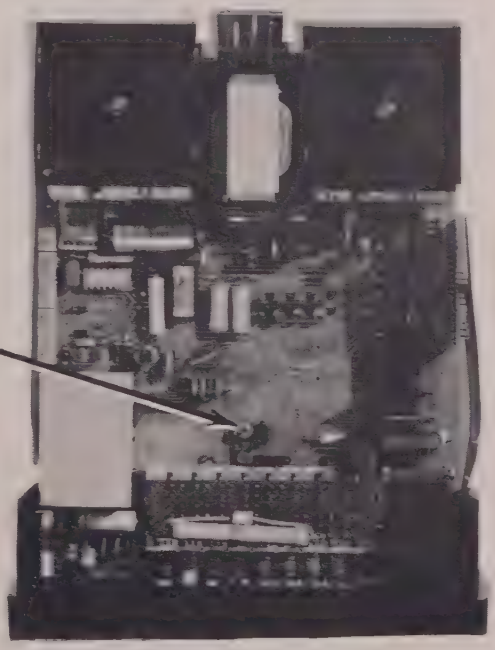

Figure 11. CALIBRATION (Sheet 2 of 3)

Model 8000

E

FUNCTION
KΩ

RANGE
20

INPUT
19KΩ

ADJUSTMENT
KOHM (R12)

DISPLAY
19.00

F

FUNCTION
20 MΩ

RANGE
NONE SELECTED

INPUT
19MΩ

ADJUSTMENT
20M (R55)

DISPLAY
19.00

Figure 11. CALIBRATION (Sheet 3 of 3)

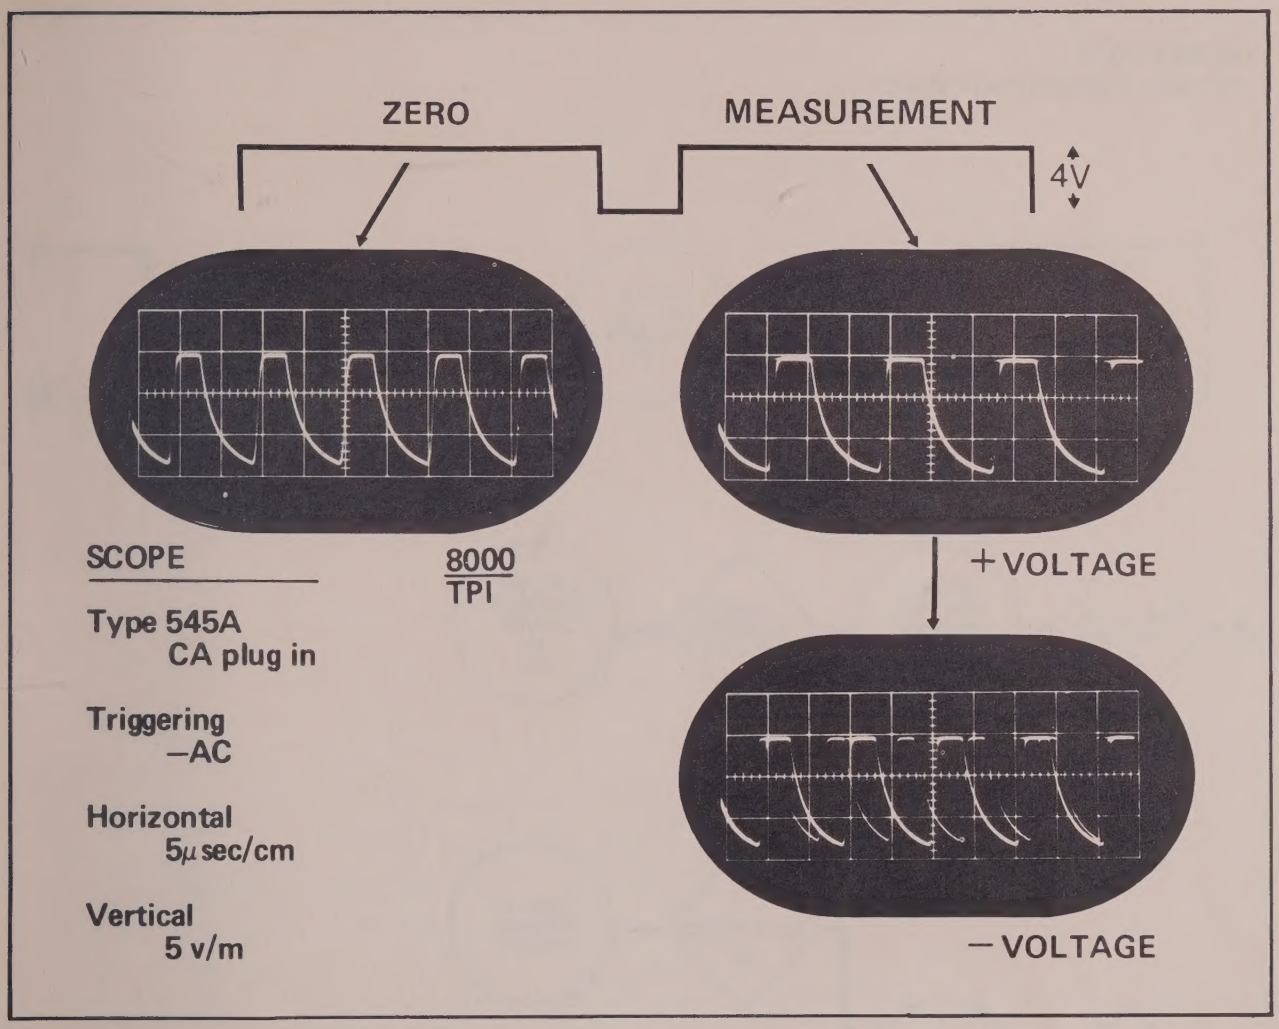

Figure 12. OSCILLSCOPE

MODEL 8000
TROUBLESHOOTING CHART

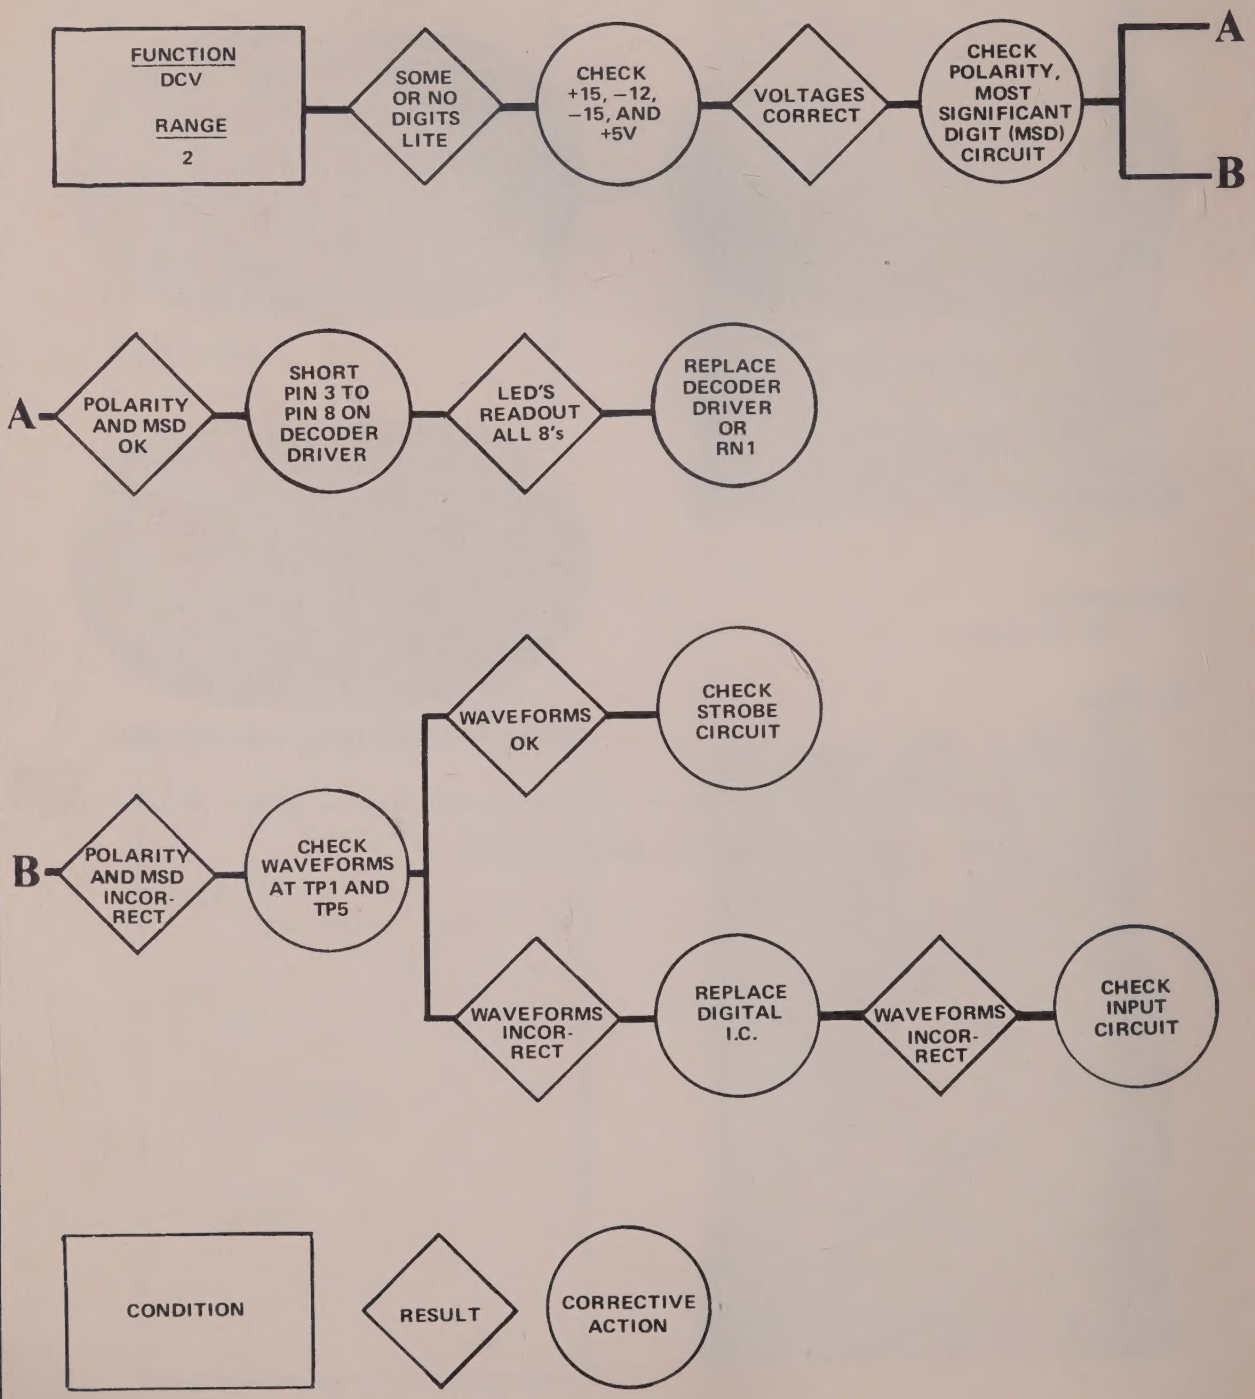

Figure 13.

www.manualsplus.com
1020782